


SKIP*HOP®

TROPICAL PARADISE activity gym & soother

EN Read all instructions before assembly.

IMPORTANT! Keep instructions for future use.

CONTENTS:

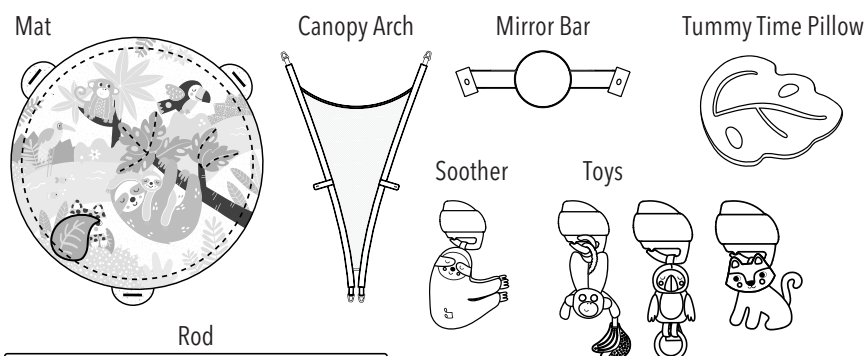

CLEANING AND CARE:

Activity Mat: Remove fiberglass rod before washing. Machine wash cold, gentle cycle. No bleach. Dry flat. Do not iron. Do not dry clean.

Pillow: Machine wash cold, gentle cycle. No bleach. Dry flat. Do not iron. Do not dry clean.

Arches: Spot Clean only.

Toucan & Monkey Toy: Spot Clean only. Do not submerge in water.



Leopard Toy: Machine wash cold, gentle cycle. No bleach. Dry Flat. Do not Iron. Do not dry clean.

Sloth Soother: Spot Clean only. Do not submerge in water. Remove batteries when unit is not in use for an extended period of time.

GYM ASSEMBLY:

Adult assembly required.


1. Place mat flat on floor with pattern facing up, and place canopy arch on the mat with fabric tabs on top.

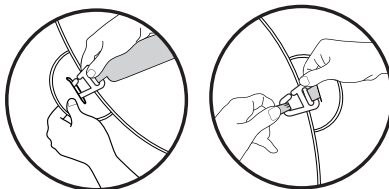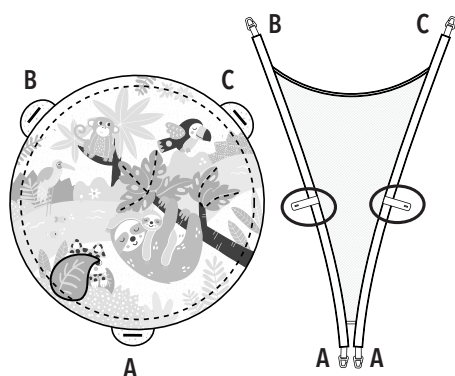

2. Select the arch end A (2 plastic hooks) and insert both hooks into slot A.

3. Reach under mat and attach the hooks through the fabric loops on the bottom of the mat.


4. Repeat step 2 and 3 for arch end B and C to slot B and C as shown.

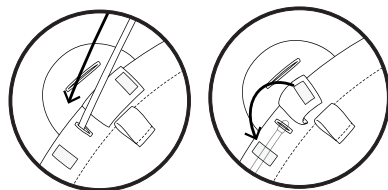


Remove rod before washing the mat.
To re-assemble:

1. Insert rod into channel under play mat.
2. Make sure rod is secure and positioned so the end goes past the hole.
3. Close the hook-and-loop flap.

MIRROR BAR ASSEMBLY:

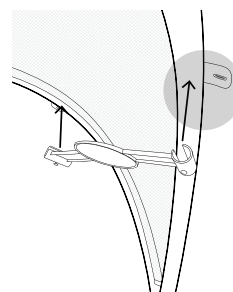


1. Place mirror bar under the canopy arch, directly under the fabric tabs and press in place.

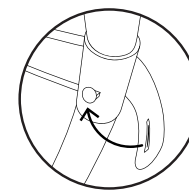

2. Wrap the fabric tab around the mirror bar and secure to button.

SLOTH SOOTHER:

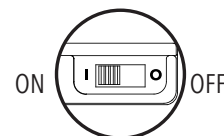


1. Turn ON the module.




Play 2 different sounds:
Rainforest & Brook and White Noise & Heartbeat

Standby mode after 10 minutes. Always turn module off when not in use to conserve battery power.

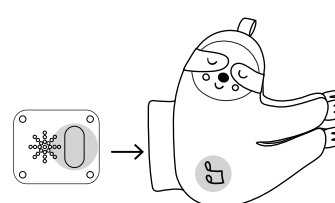


2. Slide module into sloth with button aligned with music note.

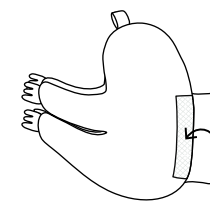


3. Secure hook and loop closure.
4. Squeeze to activate sound.

 
INSERTING OR REPLACING THE BATTERIES:



 1. Loosen the battery compartment screws using a Phillips head screwdriver.



2. Open battery door compartment and insert three new AAA (1.5V) Alkaline batteries. Be sure to insert in correct polarity.

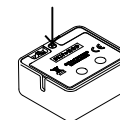

3. Position the battery door securely back into place and tighten with screwdriver.
***Batteries should be replaced by an adult.**

BATTERY INFORMATION:

- Always dispose of used batteries properly. See section on safety and disposal information.
- Batteries are to be inserted with the correct polarity.
- Do not burn batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Different types of batteries or new and used batteries are not to be mixed.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

CONSUMER INFORMATION: SAFETY AND DISPOSAL

At end of product life remove batteries from product by following the battery replacement instructions. Substances used in batteries pose potential environmental and health effects. Do not mix waste batteries with other waste. Keep waste batteries separate. Do not dispose of by landfill or by incineration. Return waste batteries to your point of purchase or recycle center. Recycle all waste batteries per local regulation. Do not dispose of Waste Electrical Electronic Equipment (WEEE), including batteries, in unsorted municipal waste; collect separately. Dispose of at WEEE collection sites per local regulation. WEEE contains chemicals that are hazardous to the environment and human health. The end-user's participation is critical to the success of WEEE collection.



© 2019 Skip Hop, Inc.
All rights reserved.
50 W 23 ST, NY, NY 10010
In the US: 888.782.9548
www.skiphop.com
Made in China

305400-01



EU REP:
Fox Williams
10 Finsbury Square
London EC2A 1AF, UK