

# SKIP\*HOP®


## DISCOVEROSITY™

### 3-in-1 sensory table




#### IMPORTANT! KEEP FOR FUTURE REFERENCE.

##### CONTENTS:

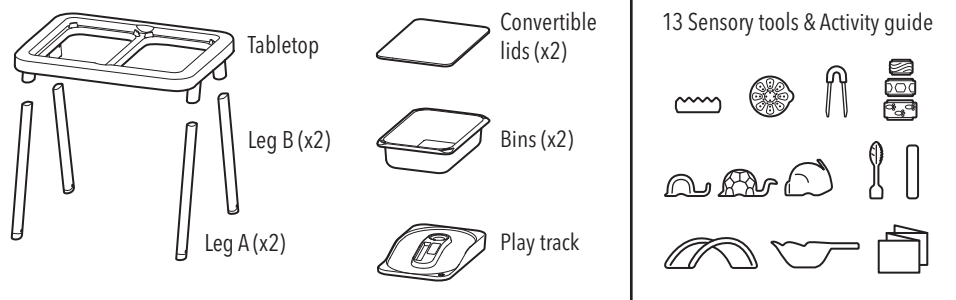


##### PLAY MODES:

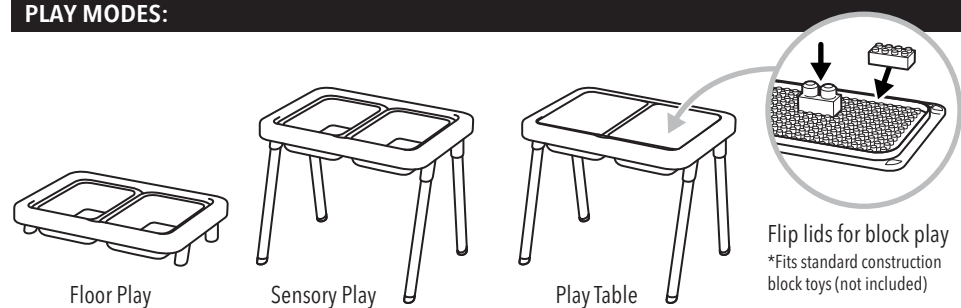

##### ASSEMBLY INSTRUCTIONS:

Adult assembly required.

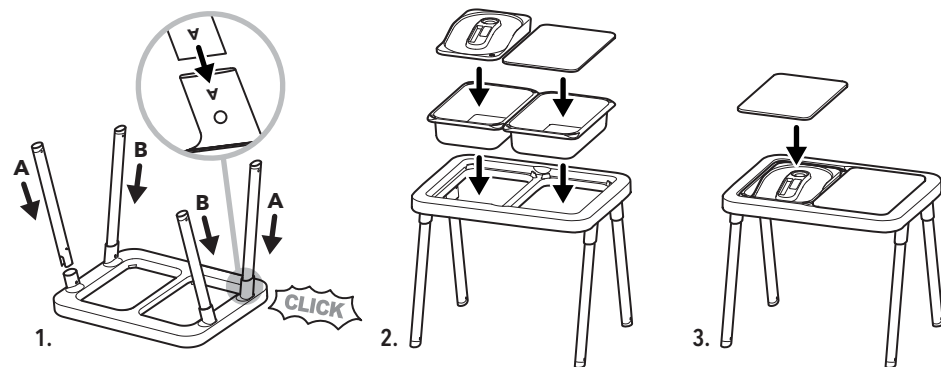

#### ⚠️ **WARNING:**

##### **ADULT ASSEMBLY REQUIRED.**

- Adult supervision required. Do not leave child unattended.
- This product is intended for use by children ages 18 months+.
- **WARNING:** DO NOT use small items with this product that could become choking hazards such as marbles, water beads or other small parts. Children under 5 years old can choke or suffocate from small parts.
- **WARNING:** Never leave your child unattended around water. Children can drown even in very small amounts of water. Fill ONLY with clean tap water. DO NOT store or leave water in product when not in use.
- **WARNING:** DO NOT allow children to play with water near an electrical source or near electrical devices to avoid electric shock and/or electrocution.
- Use this product on a firm, level floor.
- Do not allow children to sit, stand, play, or climb on the top of the table. Failure to do so may cause the product to become unstable. Maximum Load 100 lb. /45 kg.
- For sand play: Use only clean play sand and keep sand covered with lid when not in use.
- Remove & discard all packaging materials properly. Do not allow children to play with packaging materials.
- Do not use this item if any components are missing or damaged.

##### **MAINTENANCE & CARE:**

- Always inspect product before playing.
- DO NOT attempt to modify or repair this product. For help, contact Skip Hop Consumer Affairs.
- Wipe surfaces with mild soap and water. Air dry.

© Skip Hop, Inc.  
100 W 33 ST, STE 1125, NY, NY 10001  
In the US: 888.782.9548  
US warranty: [www.skiphop.com](http://www.skiphop.com)

9Q249010-01