 


SKIP*HOP®

305409.02

AGES
6m+

FARMSTAND rock-a-mole guitar

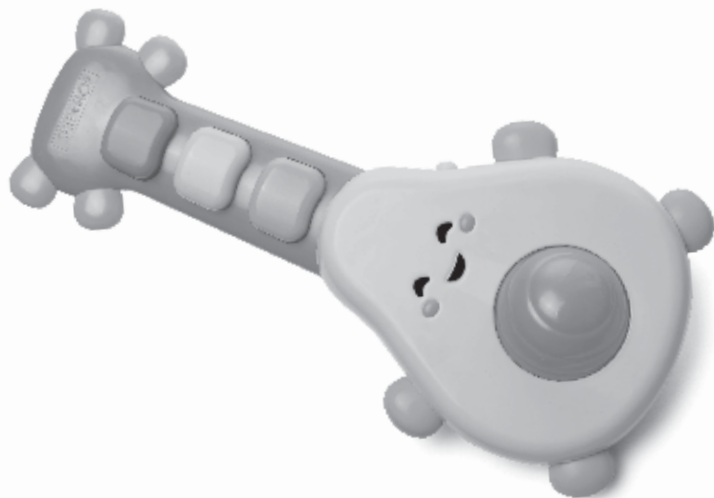

OWNER'S MANUAL

© Skip Hop, Inc.

SKIP HOP and MUST-HAVES MADE BETTER are trademarks owned by Skip Hop, Inc. All rights reserved.

50 W 23 ST, NY, NY 10010
In the US: 888.782.9548
www.skiphop.com
Made in China

EU REPS:

Carter's Holdings B.V.
Prins Bernhardplein 200
1097 JB Amsterdam
The Netherlands

Fox Williams
10 Finsbury Square
London EC2A 1AF, UK

Meets or exceeds ASTM
F963, EN71 and applicable
safety standards.



CAN ICES-3 (B)/NMB-3(B)

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TC technician for help.

EN IMPORTANT! Keep instructions for future use.

INSTRUCTIONS FOR USE:

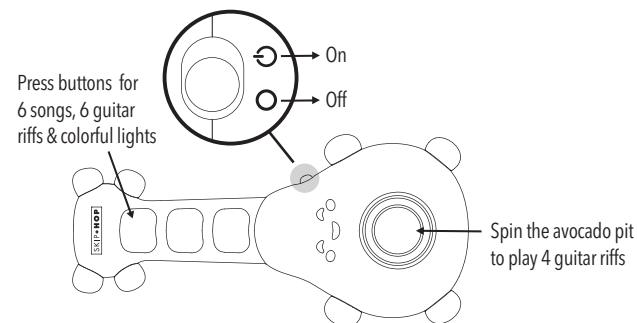


CLEANING & CARE:

Wipe clean with a slightly damp cloth. Air dry. To prolong the life of this product, remove batteries when toy is in storage. Do not drop on hard surfaces or expose to moisture. Do not submerge in water. Please remove all plastic and/or wire packaging fasteners before giving to a child.

INSERTING THE BATTERIES:

Adult assembly required.

 3 AAA Batteries are included for demo purposes only, replace with new batteries.

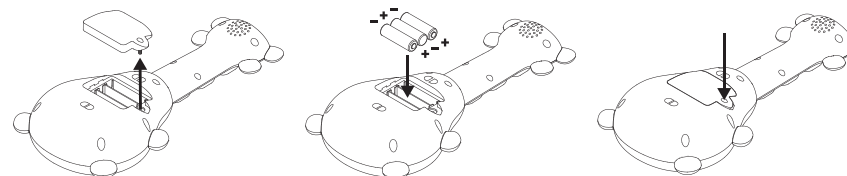

1. Loosen the battery door screw using a Philips head screwdriver.

2. Open battery door compartment and insert three new AAA (1.5V) Alkaline batteries. Be sure to insert with correct polarity.

3. Position the battery door securely back into place and tighten with a screwdriver.

***Batteries should be replaced by an adult.**

BATTERY INFORMATION:

At the end of product life, remove batteries from product by following the above battery replacement instructions. Always dispose of used batteries properly. See section on safety and disposal information. • Batteries are to be inserted with the correct polarity. • Do not burn batteries. • Non-rechargeable batteries are not to be recharged. • Rechargeable batteries are only to be charged under adult supervision. • Rechargeable batteries are to be removed from the toy before being charged. • Exhausted batteries are to be removed from the toy. • The supply terminals are not to be short-circuited. • Different types of batteries or new and used batteries are not to be mixed. • Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

CONSUMER INFORMATION: SAFETY AND DISPOSAL

At end of product life remove batteries from product by following the battery replacement instructions. Substances used in batteries pose potential environmental and health effects. Do not mix waste batteries with other waste. Keep waste batteries separate. Do not dispose of by landfill or by incineration. Return waste batteries to your point of purchase or recycle center. Recycle all waste batteries per local regulation. Do not dispose of Waste Electrical Electronic Equipment (WEEE), including batteries, in unsorted municipal waste; collect separately. Dispose of at WEEE collection sites per local regulation. WEEE contains chemicals that are hazardous to the environment and human health. The end-user's participation is critical to the success of WEEE collection.

