

# SKIP\*HOP®

9J057510-02

6-48m

EXPLORE & MORE™


## 4-in-1 grow along activity walker




### OWNER'S MANUAL

**IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.**

**CONTENTS:**

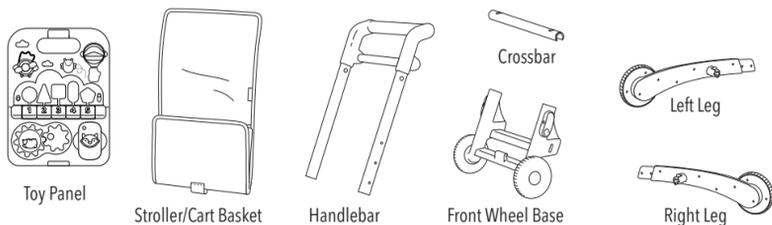

**4 WAYS TO PLAY:**

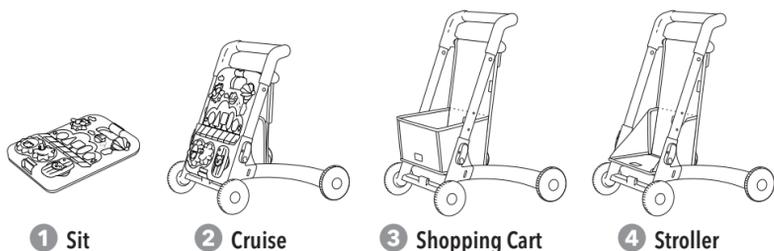

**BATTERY INFORMATION:** Always dispose of used batteries properly. See section on safety and disposal information. • Batteries are to be inserted with the correct polarity. • Do not burn batteries. • Non-rechargeable batteries are not to be recharged. • Rechargeable batteries are only to be charged under adult supervision. • Rechargeable batteries are to be removed from the toy before being charged. • Exhausted batteries are to be removed from the toy. • The supply terminals are not to be short-circuited. • Different types of batteries or new and used batteries are not to be mixed. • Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

**CONSUMER INFORMATION: SAFETY AND DISPOSAL**

At end of product life remove batteries from product by following the battery replacement instructions. Substances used in batteries pose potential environmental and health effects. Do not mix waste batteries with other waste. Keep waste batteries separate. Do not dispose of by landfill or by incineration. Return waste batteries to your point of purchase or recycle center. Recycle all waste batteries per local regulation. Do not dispose of Waste Electrical Electronic Equipment (WEEE), including batteries, in unsorted municipal waste; collect separately. Dispose of at WEEE collection sites per local regulation. WEEE contains chemicals that are hazardous to the environment and human health. The end-user's participation is critical to the success of WEEE collection.



Do not dispose of WEEE in trash.

© Skip Hop, Inc.  
SKIP HOP and EXPLORE & MORE are trademarks owned by Skip Hop, Inc. All rights reserved.  
100 W 33 ST, STE 1125, NY, NY 10001  
In the US: 888.782.9548  
www.skiphop.com


**CLEANING & CARE:** Wipe clean with a slightly damp cloth. **Basket:** Spot clean only. Do not submerge in water.

**WARNING:** Do not sit on product. For indoor use only. Never leave child unattended. Adult supervision required. Please keep all relevant information for future reference.


**INSERTING THE BATTERIES:**

Adult assembly required.


Requires 3 AA batteries

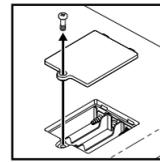

1. Loosen the battery door screw using a Philips head screwdriver.

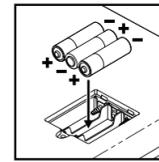

2. Open battery door compartment and insert 3 new AA (1.5V) Alkaline batteries. Be sure to insert with correct polarity.

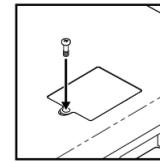

3. Position the battery door securely back into place and tighten with a screwdriver. **\*Batteries should be replaced by an adult. \*Do not use without battery door properly attached.**





**FIRST TIME ASSEMBLY:**

Adult assembly required.

1. Attach left and right legs into the crossbar with wheels on the outside.


Insert crossbar into leg at an angle and slide in.

**STOP** Make sure the post is lined up.

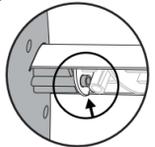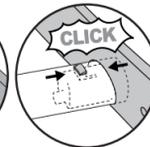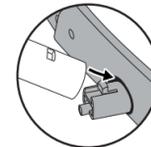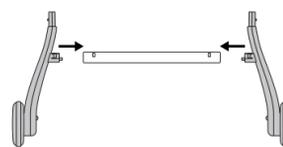


Bottom view



2. Place front base on ground as shown. Snap legs firmly into front base.

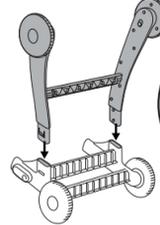

3. Insert handle assembly into the front wheel base assembly. Adjust height to lowest setting.

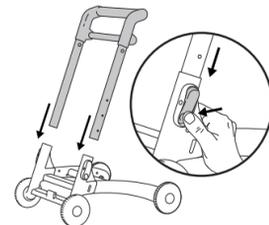




4. Attach Stroller/Cart Basket to top rail as shown, securing with hook & loop. Wrap bottom tab around crossbar and secure with hook & loop. Fold up basket panel and secure hook & loop.

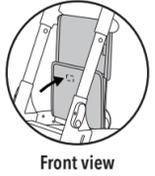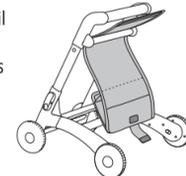

Back view



Front view

5. Attach toy panel to frame as shown and attach clip to top rail, over the basket.

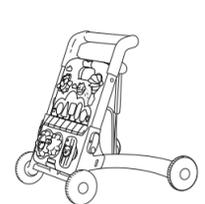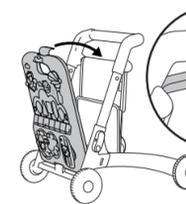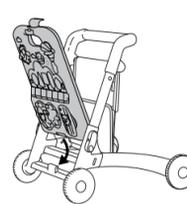





**PLAY FEATURES:**

**SPEED CONTROL:**

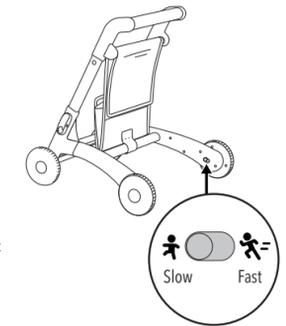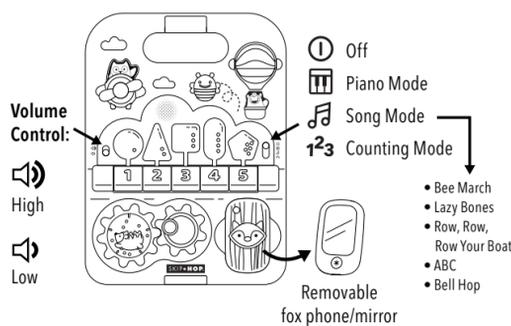

**WALKER TO STROLLER / SHOPPING CART CONVERSION:**

Remove Toy Panel and remove top of Stroller/Cart Basket from top rail. Adjust height by pushing button on each side and pulling up to adjust. Reattach top of the basket.

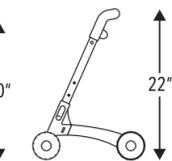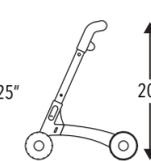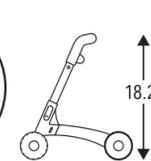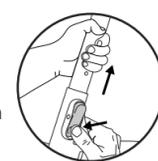

Lowest height

Middle height

Highest height

Fold front of basket in for Stroller mode.



Fold front of basket out for Shopping Cart mode.

